


Model:



PARTS BREAKDOWN

Call 1.800.221.9705 for questions concerning performance of the product or other inquiries.

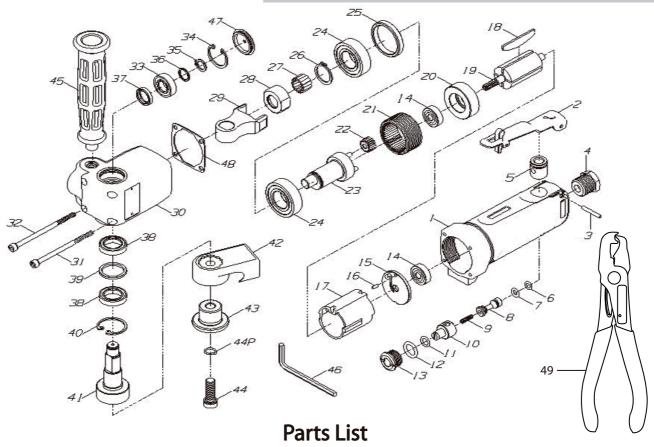

Index No.	Part No.	Description	Qty
1	DS2000-01	Motor Housing	1
2	DS2000-02	Lever	1
3	DS2000-03	Pin	1
4	DS2000-04	Inlet	1
5	DS2000-05	Valve Bushing	1
6	DS2000-06	O-Ring	1
7	DS2000-07	O-Ring	1
8	DS2000-08	Valve Stem	1
9	DS2000-09	Valve Spring	1
10	DS2000-10	Air Regulator	1
11	DS2000-11	O-Ring	1
12	DS2000-12	O-Ring	1
13	DS2000-13	Valve Plug	1
14	DS2000-14	Ball Bearing	2
15	DS2000-15	Rear End Plate	1
16	DS2000-16	Pin	1
17	DS2000-17	Cyllinder	1
18	DS2000-18	Rotor Blade	4
19	DS2000-19	Rotor	1
20	DS2000-20	Front End Plate	1
21	DS2000-21	Internal Gear	1
22	DS2000-22	Planet Gear	3
23	DS2000-23	Planet Carrier	1
24	DS2000-24	Baller Bearing	2
25	DS2000-25	Spacer	1

Index No.	Part No.	Description	Qty
26	DS2000-26	Retainer Ring	1
27	DS2000-27	Needle	13
28	DS2000-28	Needle Plate	1
29	DS2000-29	Drive Spindle	1
30	DS2000-30	Angle Head	1
31	DS2000-31	Screw	2
32	DS2000-32	Screw	2
33	DS2000-33	Ball Bearing	1
34	DS2000-34	Retainer Ring	1
35	DS2000-35	Retainer Ring	1
36	DS2000-36	Spacer	1
37	DS2000-37	Spacer	1
38	DS2000-38	Ball Bearing	2
39	DS2000-39	Spacer	1
40	DS2000-40	Retainer Ring	1
41	DS2000-41	Spindle	1
42	DS2000-42	Blade	1
43	DS2000-43	Plate	1
44	DS2000-44	Screw	1
44P	DS2000-44P	Spring Washer	1
45	DS2000-45	Handle	1
46	DS2000-46	Hex Wrench	1
47	DS2000-47	Cover	1
48	DS2000-48	Gasket	1
49	DS2000-49	Door Skin Starter Pliers	1